

Part Number	Aircraft Name	Description
4954309	Embraer	ELECTRONIC STARTER CONTROLLER
7511900-92502	Embraer	DIGITAL AUDIO
1002793-2	Embraer	HEAT EXCHANGER
DR31722T	Embraer	TIRE
419K42T1	Embraer	TYRE H40 x14.5-19
419K62T2	Embraer	TYRE H40 x 14.5-9
APS01339	Embraer	TYRE H40 x 14.5-9
419K62T2	Embraer	TYRE H40 x 14.5-9
419K62T2	Embraer	TYRE H40 x 14.5-9
419K62T2	Embraer	TYRE H40 x 14.5-9
APS01339	Embraer	TYRE H40 x 14.5-9
DR31722T	Embraer	TIRE
DR31722T	Embraer	TIRE
DR31722T	Embraer	TIRE
DR31722T	Embraer	TIRE
DR31722T	Embraer	TIRE
DR31722T	Embraer	TIRE
DR31722T	Embraer	TIRE
419K62T2	Embraer	TYRE H40 x 14.5-9
DR31722T	Embraer	TIRE
419K42T1	Embraer	TYRE H40 x14.5-19
419K62-3	Embraer	TYRE H40 x 14.5-19
419K62T2	Embraer	TYRE H40 x 14.5-9
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
190-34001-422	Embraer	WINGLET ASSY
190-34001-421	Embraer	WINGLET ASSY
190-70980-405	Embraer	ACTUATOR, RETRACTION, EQUIP
415400-1009	Embraer	RUDDER ACTUATOR
415100-1003	Embraer	AILERON PCU

416100-1003	Embraer	ELEVATOR ACTUATOR
416100-1003	Embraer	ELEVATOR ACTUATOR
416100-1001	Embraer	ELEVATOR ACTUATOR
1-6311-300	Embraer	SUNSHADE ASSY
7025365-1901	Embraer	GENERIC I/O MODULE
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
19000-780	Embraer	VALVE FILL-DRAIN
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4505003M	Embraer	APU FADEC
1000700-4	Embraer	AIR CYCLE MACHINE
4222-50	Embraer	BALLAST
1001250-4	Embraer	VALVE TURBINE
4101638	Embraer	FAN
5912843-7	Embraer	FLAP SKEW SENSOR OUTBOARD 5
33-159500-1	Embraer	ACCUMULATOR ST 100 CU.IN
33-159500-1	Embraer	ACCUMULATOR ST 100 CU.IN
4222-50	Embraer	BALLAST
602-3375	Embraer	MICROPHONE
1001456-6	Embraer	FLOW CONTROL VALVE
1001456-6	Embraer	FLOW CONTROL VALVE
4101634A	Embraer	FAN
4101634A	Embraer	FAN
140-265	Embraer	WHEEL SPEED TRANSDUCER
140-265	Embraer	WHEEL SPEED TRANSDUCER
140-265	Embraer	WHEEL SPEED TRANSDUCER
140-265	Embraer	WHEEL SPEED TRANSDUCER
7028432-1902	Embraer	PII AIOP Module
2230M80P02	Embraer	Module-Oil Filter
2230M80P02	Embraer	Module-Oil Filter
01-0770544-01	Embraer	HORN ASSY
190-17325-605	Embraer	PANEL
2043M19P01	Embraer	FILTER MAIN FUEL
NAS6406A30D	Embraer	BOLT
NAS6405A28D	Embraer	BOLT
NAS6408A42D	Embraer	BOLT
DR15857T	Embraer	E190 NOSE TYRE
820914-7	Embraer	PACK BYPASS VALVE
114E7099G3	Embraer	FULL AUTHORITY DIGITAL ENGINE CONTROL
7028432-1902	Embraer	PII AIOP Module
P547A0001-02	Embraer	PDO ACTUATOR
7028432-1902	Embraer	PII AIOP Module
80-019-01	Embraer	PROXIMITY SENSOR

DR15857T	Embraer	E190 NOSE TYRE
DR15857T	Embraer	E190 NOSE TYRE
2U2203-3	Embraer	ACTUATOR ASSY, FEEDBACK TRANS
2U2203-3	Embraer	ACTUATOR ASSY, FEEDBACK TRANS
DR15857T	Embraer	E190 NOSE TYRE
DR15857T	Embraer	E190 NOSE TYRE
DR15857T	Embraer	E190 NOSE TYRE
1701321D	Embraer	Generator Control Unit
1701321D	Embraer	Generator Control Unit
5913148-3	Embraer	TRU
5914480-2	Embraer	CHASSIS, PRIM PWR DISTR ASSY
5914481-2	Embraer	CHASSIS, PRIM PWR DISTR ASSY
142-071171	Embraer	AUTOBRAKE CONTROL
190-38605-407	Embraer	SPOILER 1 ASSY
190-38605-408	Embraer	SPOILER 1 ASSY
190-38651-407	Embraer	SPOILER2 ASSY
190-38651-408	Embraer	SPOILER2 ASSY
190-38701-407	Embraer	SPOILER3 ASSY,LH
190-38729-407	Embraer	SPOILER3 ASSY,RH
190-38731-407	Embraer	SPOILER4 ASSY,LH
190-38759-407	Embraer	SPOILER4 ASSY,RH
190-38789-407	Embraer	SPOILER5 ASSY,RH
60-5174-1	Embraer	POWER SUPPLY STROBE LIGHT
2225M27P02	Embraer	BLADE FAN
2225M27P02	Embraer	BLADE FAN
P547A0001-02	Embraer	PDO ACTUATOR
900103-1	Embraer	HYDRAULIC ACCUMULATOR
1007086-7	Embraer	FAN AIR VALVE
2377H000-002	Embraer	HYDRAULIC RESERVOIR
601C3121-027	Embraer	HARNESS
601C3121-015	Embraer	HARENSS
601C3121-013	Embraer	HARNESS
816656-3	Embraer	SENSOR TEMPERATURE
816656-3	Embraer	SENSOR TEMPERATURE
816656-3	Embraer	SENSOR TEMPERATURE
816656-3	Embraer	SENSOR TEMPERATURE
816656-3	Embraer	SENSOR TEMPERATURE
816656-3	Embraer	SENSOR TEMPERATURE
4101636A	Embraer	FAN CARGO
1700591A	Embraer	FLAP PDU
65-50325-4	Embraer	TRANSMISSION, FLAP
AS-52-0004	Embraer	COCKPIT DOOR LOCK
65C27501-3	Embraer	TRANSMISSION
65C26833-3	Embraer	VALVE STEERING
147LC10	Embraer	INDICATOR OIL TEMPERATURE
152LMA18	Embraer	INDICATOR TEMPERATURE
5913148-3	Embraer	TRU
1-7054-3	Embraer	SWITCH

69-37307-145	Embraer	ENGINE APU FIRE CONTROL
170-02748-423	Embraer	MODULE ASSY
755SUE2-4	Embraer	COMPUTER, AUTOTHROTTLE
65-52820-2	Embraer	MODULAR ASSY
5913479	Embraer	SLAT SKEW SENSOR OUTBD
170-11177-401	Embraer	MODULE ASSY
1700639	Embraer	FLAP ANGLE
C158820-1	Embraer	FLAP ACTUATOR
158300-101	Embraer	ACTUATOR AUTOPILOT
65-44561-15	Embraer	PCU FLIGHT SPOILER
65-44761-22	Embraer	PCU
366-208-001	Embraer	REFUELING
4101634A	Embraer	FAN
622-9436-101	Embraer	SYMBOL GENERATOR
1001253-1	Embraer	Controller Nacel Valves
45731-1397	Embraer	Oil Heat Exchanger
4039893-903	Embraer	VSI
367-336-002	Embraer	Unit Conditioning Fuel
2R5310A	Embraer	AUTOPILOT SERVO
522-2996-011	Embraer	MARKER RECEIVER
123CH1A	Embraer	LOW FLOW DETECTOR
200-86837-101	Embraer	EGPWS
6237M69A	Embraer	VIBE SENSOR
965-0648-009	Embraer	COMPUTER, GPWS
2-7054-3	Embraer	SWITCH
4101638	Embraer	FAN
416500-1009	Embraer	HS-ACE
1708015	Embraer	Discrete I/O Module, Spda
720737-5	Embraer	VALVE SAFETY
C158822-1	Embraer	FLAP ACTUATOR
C158823-1	Embraer	FLAP ACTUATOR
241-292-004-023	Embraer	INTEGRATED ENGINE VIBRATION MONITOR
C158818-1	Embraer	FLAP ACTUATOR
500290-2	Embraer	Lead Ignition Exciter
341D8015-549	Embraer	HOSE ASSY, HPRSOV
18-1738-9	Embraer	TRANSMT FLAP POS & STALL WARN
G7400-12	Embraer	VHF COMM CONTROL PANEL
335-088-951-0	Embraer	FAN BLADE SET
170-00624-409	Embraer	FIRE EXTINGUISHER PANEL
C158819-1	Embraer	FLAP ACTUATOR
65-44561-15	Embraer	PCU FLIGHT SPOILER
622-3890-021	Embraer	RADIO ALTIMETER
DR31722T	Embraer	TIRE
900105-1	Embraer	HYDRAULIC ACUMULATOR
915F213-4	Embraer	PANEL BUS PROTECTION
392678-3-1	Embraer	REGULATOR DIFFERENTIAL PRESSURE
7024440-1903	Embraer	POWER 902 MODULE
1700637	Embraer	FLAP ANGLE

[illegible]

568-1-26713-005	Embraer	PUMP FUEL BOOST
65-44691-3	Embraer	MODULE ASSY-LANDING GEAR
DMC50-17	Embraer	VHF AERIAL
DMC50-17	Embraer	VHF AERIAL
622-3890-020	Embraer	RAD ALT TX
622-3890-020	Embraer	RAD ALT TX
4061100-901	Embraer	AIR DATA COMPUTOR
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-4	Embraer	VALVE CHECK
123558-1-3	Embraer	VALVE CHECK
123558-1-3	Embraer	VALVE CHECK
123558-1-3	Embraer	VALVE CHECK
A71882-1	Embraer	SERVO VALVE HYD
10-60552-11	Embraer	SWITCH HYD
2CM9ABY7	Embraer	GENERATOR TACHO
941D339-1	Embraer	TRANSFORMER
941D339-1	Embraer	TRANSFORMER
65-51513-2	Embraer	GEARBOX - WING FLAP
65-51513-1	Embraer	GEARBOX - WING FLAP
65-44551-7	Embraer	ACTUATOR L/E FLAP
4101724A	Embraer	FAN
204050-10	Embraer	AIR CYCLE MACHINE
204050-10	Embraer	AIR CYCLE MACHINE
65-44561-9	Embraer	PCU
65-44561-15	Embraer	PCU FLIGHT SPOILER
65-44561-10	Embraer	PCU
8201-01-4000	Embraer	OVEN CONTROLLER
7029795-905	Embraer	COOLING FAN
2CM9ABY7	Embraer	GENERATOR TACHO
05939-3	Embraer	BALLAST UNIT
P4-01-1003-001	Embraer	BATTERY
65C36725-1	Embraer	THROTTLE SWITCH
627570-1	Embraer	SENSOR
627570-1	Embraer	SENSOR
P1377	Embraer	MICROPHONE
3605384-8	Embraer	COMBUSTOR LINER
976036-2	Embraer	OIL TANK
8891-30	Embraer	FIRE/ OVEHT DETECTOR

8891-30	Embraer	FIRE/ OVEHT DETECTOR
65-44761-19	Embraer	AILERON/ELEVATOR PCU
P2-07-0009-520	Embraer	FLASH LIGHT
801307-06	Embraer	OXYGEN CYLINDER
9C148-4	Embraer	CARTRIDGE PUMP
976J598-1	Embraer	GENERATOR AC
976J498-1	Embraer	GENERATOR AC
976J498-1	Embraer	GENERATOR AC
801240-3	Embraer	TURBINE FAN AIR CYCLE MACHINE
2607826D	Embraer	HUB ASSY
140-265	Embraer	WHEEL SPEED TRANSDUCER
C201-1500-1	Embraer	VALVE SOLENOID
38-907501-2	Embraer	EMERGENCY PARK BRAKE VALVE
65-46288-13	Embraer	TORSION LINK ASSEMBLY
R6200M3-11	Embraer	APU INLET DOOR ACTUATOR
R6200M3-11	Embraer	APU INLET DOOR ACTUATOR
55098-08	Embraer	HYDRAULIC PUMP
801240-3	Embraer	TURBINE FAN AIR CYCLE MACHINE
371380	Embraer	PUMP HYDRAULIC
622-5377-001	Embraer	HF TRANSCEIVER
474349-1	Embraer	DRIER METERING
474349-1	Embraer	DRIER METERING
473597-18	Embraer	SMOKE DETECTOR
3291675-1	Embraer	VLV AIR STARTER
341W5818-503	Embraer	WIRE HARNESS ASSEMBLY
341W5817-501	Embraer	WIRE HARNESS ASSEMBLY
1708017	Embraer	ANALOG I/O MODULE
1855A0000-04	Embraer	Steering Module
1001778-3	Embraer	SENSOR FLOW
05939-3	Embraer	BALLAST UNIT
1U1065-2	Embraer	COMPENSATOR
1701321D	Embraer	Generator Control Unit
30-2722-1	Embraer	Light Assy
124-838	Embraer	INDICATOR TEMPERATURE
124-838	Embraer	INDICATOR TEMPERATURE
124-838	Embraer	INDICATOR TEMPERATURE
155665-3-3	Embraer	FLOW CTRL VALVE
155665-3-3	Embraer	FLOW CTRL VALVE
155665-3-2	Embraer	FLOW CTRL VALVE
155665-3-2	Embraer	FLOW CTRL VALVE
1-115725	Embraer	CAP ASSY DRAIN
8921082G5	Embraer	WATER HEATER
568-1-26713-003	Embraer	PUMP FUEL BOOST
568-1-26713-005	Embraer	PUMP FUEL BOOST
65-44898-8	Embraer	MAIN GEAR DAMPER ASSEMBLY
65-44631-1	Embraer	VALVE FLAP CNTRL
65-44631-1	Embraer	VALVE FLAP CNTRL
3608898-2	Embraer	DPU OIL PUMP

FE374500000	Embraer	Pneumatic Assembly
FE374400000	Embraer	Pneumatic Assembly
30-0906-104	Embraer	LIGHT RECOGNITION
30-0906-105	Embraer	LIGHT RECOGNITION
622-6827-022	Embraer	HF CONTROL
948F458-3	Embraer	GENERATOR CONTROL PANEL
172938-001	Embraer	SWITCH RELAY
172938-001	Embraer	SWITCH RELAY
172938-001	Embraer	SWITCH RELAY
172938-001	Embraer	SWITCH RELAY
965-0976-020-212	Embraer	EGPWS COMPUTER
720737-5	Embraer	VALVE SAFETY
698427-18-1	Embraer	APU FAN COOLING
2760000-101	Embraer	VALVE AIR SHUT OFF
2760000-101	Embraer	VALVE AIR SHUT OFF
2760000-101	Embraer	VALVE AIR SHUT OFF
2760000-101	Embraer	VALVE AIR SHUT OFF
04-90005-084A	Embraer	PROXIMITY SENSOR
04-90005-084A	Embraer	PROXIMITY SENSOR
45-0083-3	Embraer	LIGHT LANDING
607510-3	Embraer	CONTROLLER
941D335-4	Embraer	CIRCUIT BREAKER
941D335-4	Embraer	CIRCUIT BREAKER
941D335-4	Embraer	CIRCUIT BREAKER
10-60757-22	Embraer	INDICATOR VOLMETER AC
10-60757-22	Embraer	INDICATOR VOLMETER AC
2094-0011	Embraer	INDICATOR WATER QTY
2094-0011	Embraer	INDICATOR WATER QTY
548384-1	Embraer	SENSOR
548384-1	Embraer	SENSOR
548384-1	Embraer	SENSOR
2094-0004	Embraer	INDICATOR
81000-17501	Embraer	MAP LIGHT ASSY
1002391-1	Embraer	GAGE PRESSURE SENSOR
548388-1	Embraer	SENSOR TEMPERATURE & ANTICIPATOR
30903828	Embraer	SQUIB
80-019-01	Embraer	PROXIMITY SENSOR
54B384-1	Embraer	SENSOR DUCT ANTICIPATOR
903-1342	Embraer	MICROPHONE
602-3375	Embraer	MICROPHONE
5912843-7	Embraer	FLAP SKEW SENSOR OUTBOARD 5
522-3177-004	Embraer	INDUCTOR
170-44178-403	Embraer	ELECTRICAL KIT PCB MOUNTING
ST107R	Embraer	TRANSMITTER PRESSURE
3-111794	Embraer	VALVE RESEVOIR DRAIN
3-111794	Embraer	VALVE RESEVOIR DRAIN
5059	Embraer	SHOCK ABSORBER MLG
C201-1500-1	Embraer	VALVE SOLENOID

40-817	Embraer	TRANSDUCER WHEEL SPEED
40-817	Embraer	TRANSDUCER WHEEL SPEED
40-817	Embraer	TRANSDUCER WHEEL SPEED
40-817	Embraer	TRANSDUCER WHEEL SPEED
40-817RA	Embraer	TRANSDUCER WHEEL SPEED
4101636A	Embraer	FAN CARGO
170-00679-405	Embraer	Trim Module Assy
3876326-6	Embraer	SWITCH SWITCH
607510-2	Embraer	CONTROLLER
622-4096-001	Embraer	PA AMPLIFIER
915F213-4	Embraer	PANEL BUS PROTECTION
372697-13-1	Embraer	APU STARTER MOTOR
6672M202	Embraer	VIBRATION MONITOR
69-37314-81	Embraer	SYSTEM GEN APU
42-719-02	Embraer	ANTI SKID AUTO BRAKE
65-44691-6	Embraer	MODULAR ASSY LANDING GEAR
5669-7	Embraer	VALVE - FLOW
32-2684-003	Embraer	VALVE
32-2684-003	Embraer	VALVE
69-14106-3	Embraer	TRANSFER CYLINDER
69-14106-4	Embraer	TRANSFER CYLINDER
4105DA	Embraer	CONTROL VALVE
65-44691-5	Embraer	MODULE ASSY-LANDING GEAR
15800-358	Embraer	SOLENOID
1001060-2	Embraer	AMS I/O CARD
142-091143	Embraer	Brake Control Module
1708015	Embraer	Discrete I/O Module, Spda
19000-340	Embraer	Fill / Drain Switch Water Sys
4235-11-0200	Embraer	FLIGHT ATTENDAND
4263-10	Embraer	UNIT PASSENGER SERVICE
4263-10	Embraer	UNIT PASSENGER SERVICE
AS-33-0008	Embraer	EMERGENCY LIGHT
S65-8280-41	Embraer	ANTENNA VHF
69-37324-18	Embraer	INDICATOR TEMPERATURE
S65-5366-7L	Embraer	Antenna
S65-5366-7L	Embraer	Antenna
S65-5366-7L	Embraer	Antenna
G7400-12	Embraer	VHF COMM CONTROL PANEL
69-37315-300	Embraer	STANDBY POWER MODULE
C5C	Embraer	COMPASS STANDBY
SRDL6D	Embraer	INDICATOR DUAL PRESSURE
SRDL6D	Embraer	INDICATOR DUAL PRESSURE
SRDL6D	Embraer	INDICATOR DUAL PRESSURE
SRDL6D	Embraer	INDICATOR DUAL PRESSURE
162BL903	Embraer	ELECTRICAL RESISTANCE THERMOMETER
602-3375	Embraer	MICROPHONE
392678-3-1	Embraer	REGULATOR DIFFERENTIAL PRESSURE
392678-3-1	Embraer	REGULATOR DIFFERENTIAL PRESSURE

392678-3-1	Embraer	REGULATOR DIFFERENTIAL PRESSURE
1732945-01	Embraer	FILTER ASSY
FRH340021H	Embraer	AUTO DRAIN VALVE
123CH1A	Embraer	LOW FLOW DETECTOR
4163DA	Embraer	VALVE HYDRAULIC
4163DA	Embraer	VALVE HYDRAULIC
159595	Embraer	FUEL INJECTION NOZLE
159595	Embraer	FUEL INJECTION NOZLE
1007086-3	Embraer	FAN AIR VALVE
65-44981-5	Embraer	MODULAR PACKAGE ASSY
65-44981-5	Embraer	MODULAR PACKAGE ASSY
1651	Embraer	VALVE HYDRAULIC RELIEF
1651	Embraer	VALVE HYDRAULIC RELIEF
10-60551-2	Embraer	VALVE HYDRAULIC RELIEF
1U1150	Embraer	RUDDER PCU
65-44810-4	Embraer	ACTUATOR
69-35500-5	Embraer	ACTUATOR
69-35500-4	Embraer	ACTUATOR
1U1065-2	Embraer	COMPENSATOR
021-056-002	Embraer	FUEL QUANTITY PROBE
020-240-012	Embraer	FUEL QUANTITY PROBE
020-240-012	Embraer	FUEL QUANTITY PROBE
601C0201-037	Embraer	CASCADE, (POST SB 78-0002)
601C0201-041	Embraer	CASCADE, (POST SB 78-0002)
601C0201-035	Embraer	CASCADE, (POST SB 78-0002)
601C0201-031	Embraer	CASCADE, (POST SB 78-0002)
601C0201-031	Embraer	CASCADE, (POST SB 78-0002)
601C0201-033	Embraer	CASCADE, (POST SB 78-0002)
601C0201-031	Embraer	CASCADE, (POST SB 78-0002)
601C2417-009	Embraer	GIMBAL
601C0202-69	Embraer	PLATE
2U2210-020	Embraer	TUBE - SUPPLY
2U2210-021	Embraer	TUBE - RETURN
2U2208-011	Embraer	TUBE - RETURN
2U2208-010	Embraer	TUBE - SUPPLY
601C0202-0791	Embraer	CASCADE SUPPORT
2U2210-014	Embraer	TUBE - STOW
2U2210-010	Embraer	TUBE - DEPLOY
601C0201-035	Embraer	CASCADE, (POST SB 78-0002)
601C0201-037	Embraer	CASCADE, (POST SB 78-0002)
601C0201-037	Embraer	CASCADE, (POST SB 78-0002)
601C0201-033	Embraer	CASCADE, (POST SB 78-0002)
601C0201-030	Embraer	CASCADE, (POST SB 78-0002)
2U2209-010	Embraer	TUBE - RETURN
2U2210-017	Embraer	TUBE - RETURN
2U2210-011	Embraer	TUBE - DEPLOY AFT
2U2210-016	Embraer	TUBE - SUPPLY
1703917-1	Embraer	TORQUE TUBE F3

1703917-1	Embraer	TORQUE TUBE F3
5912868-7	Embraer	TORQUE TUBE S3
5912868-7	Embraer	TORQUE TUBE S3
5912949-7	Embraer	TORQUE TUBE S7, F4, 190
5913003-1	Embraer	TORQUE TUBE F4 (170), F1 (190)
5913003-1	Embraer	TORQUE TUBE F4 (170), F1 (190)
5912868-13	Embraer	TORQUE TUBE S13, F7, 190
5912949-5	Embraer	TORQUE TUBE S5, 190
5912949-5	Embraer	TORQUE TUBE S5, 190
601C1204-051	Embraer	FIRE BLANKET
601C1204-055	Embraer	FIRE BLANKET
601C1207-025	Embraer	FIRE BLANKET
815289-2	Embraer	SENSOR
815289-2	Embraer	SENSOR
815289-2	Embraer	SENSOR
815289-2	Embraer	SENSOR
14330-185-1	Embraer	BRACKET
14330-196	Embraer	ELBOW BOWL
15800-358	Embraer	SOLENOID
15801-112	Embraer	RING ASSY
15801-120	Embraer	VALVE
15801-155	Embraer	SUPPORT VERTICAL
15801-156-1	Embraer	SUPPORT
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
5913148-3	Embraer	TRU
2124-0001-405	Embraer	LINEAR DAMPER
2124-0001-405	Embraer	LINEAR DAMPER
2124-0001-405	Embraer	LINEAR DAMPER
7028273-822	Embraer	PRIMARRY ACT. ELECT
415700-1001	Embraer	AILERON OVERRIDE UNIT
1700591A	Embraer	FLAP PDU
60-5174-1	Embraer	POWER SUPPLY STROBE LIGHT
170-71180-409	Embraer	ACTUATOR, RETRACTION, EQUIPPED
51166-03	Embraer	AC MOTOR DRIVEN PUMP HYDRAULIC
1703781A	Embraer	AIR DRIVEN GENERATOR, RAT
2990075-101	Embraer	PRESSURE RELIEF VALVE
2990075-101	Embraer	PRESSURE RELIEF VALVE
2043M41P02	Embraer	ACCELEROMETER
2043M41P02	Embraer	ACCELEROMETER
7034057-1902	Embraer	PM Nic+Proc Module
367-347-007	Embraer	HS-ACE
414800-1011	Embraer	MULTI-FUNCTION SPOILER PCU

414800-1011	Embraer	MULTI-FUNCTION SPOILER PCU
414800-1011	Embraer	MULTI-FUNCTION SPOILER PCU
52-633500-1	Embraer	PRESSURE TRANSDUCER
52-633500-1	Embraer	PRESSURE TRANSDUCER
52-633500-1	Embraer	PRESSURE TRANSDUCER
52-633500-1	Embraer	PRESSURE TRANSDUCER
601C0201-031	Embraer	CASCADE, (POST SB 78-0002)
601C0201-031	Embraer	CASCADE, (POST SB 78-0002)
601C0201-033	Embraer	CASCADE, (POST SB 78-0002)
601C0201-037	Embraer	CASCADE, (POST SB 78-0002)
601C0201-037	Embraer	CASCADE, (POST SB 78-0002)
601C0201-045	Embraer	CASCADE, (POST SB 78-0002)
020-240-014	Embraer	FUEL QUANTITY PROBE
020-240-014	Embraer	FUEL QUANTITY PROBE
020-240-014	Embraer	FUEL QUANTITY PROBE
020-240-014	Embraer	FUEL QUANTITY PROBE
020-240-003	Embraer	FUEL QUANTITY PROBE
020-240-003	Embraer	FUEL QUANTITY PROBE
020-240-011	Embraer	FUEL QUANTITY PROBE
020-240-011	Embraer	FUEL QUANTITY PROBE
020-240-005	Embraer	FUEL QUANTITY PROBE
020-240-005	Embraer	FUEL QUANTITY PROBE
020-240-006	Embraer	FUEL QUANTITY PROBE
020-240-006	Embraer	FUEL QUANTITY PROBE
020-240-007	Embraer	FUEL QUANTITY PROBE
020-240-007	Embraer	FUEL QUANTITY PROBE
057-023-001	Embraer	FUEL LOW LEVEL SENSOR
057-023-001	Embraer	FUEL LOW LEVEL SENSOR
020-240-009	Embraer	FUEL QUANTITY PROBE
020-240-009	Embraer	FUEL QUANTITY PROBE
020-240-009	Embraer	FUEL QUANTITY PROBE
020-240-009	Embraer	FUEL QUANTITY PROBE
020-240-008	Embraer	FUEL QUANTITY PROBE
020-240-008	Embraer	FUEL QUANTITY PROBE
020-240-008	Embraer	FUEL QUANTITY PROBE
020-240-008	Embraer	FUEL QUANTITY PROBE
020-240-008	Embraer	FUEL QUANTITY PROBE
020-240-008	Embraer	FUEL QUANTITY PROBE
020-240-106	Embraer	FUEL QUANTITY PROBE
020-240-106	Embraer	FUEL QUANTITY PROBE
020-240-004	Embraer	FUEL QUANTITY PROBE
020-240-004	Embraer	FUEL QUANTITY PROBE
020-240-013	Embraer	FUEL QUANTITY PROBE
020-240-013	Embraer	FUEL QUANTITY PROBE
021-056-002	Embraer	FUEL QUANTITY PROBE
341-5458-503	Embraer	FIREX CORE NOZZLE
190-06614-405	Embraer	BRACKET
190-3111-021	Embraer	COVER-SKIN CUTOUT

190-55162-403	Embraer	DUCT
190-55162-403	Embraer	DUCT
ALF UNIDENTIFIAB	Embraer	ALF NO ID
ALF UNIDENTIFIAB	Embraer	ALF NO ID
ALF UNIDENTIFIAB	Embraer	ALF NO ID
ALF UNIDENTIFIAB	Embraer	ALF NO ID
ALF UNIDENTIFIAB	Embraer	ALF NO ID
ALF UNIDENTIFIAB	Embraer	ALF NO ID
ALF UNIDENTIFIAB	Embraer	ALF NO ID
FIRST AID KIT	Embraer	FIRST AID KIT
C352	Embraer	BCF FIREX
42-474	Embraer	GLOVES FIRE
170-70900-401	Embraer	CHECK VALVE ASSY
341D8026-503	Embraer	ANTI-ICE TRANSDUCER
341D8026-503	Embraer	ANTI-ICE TRANSDUCER
31-8788-1	Embraer	LIGHT ASSY-WING FWD
5912843-7	Embraer	FLAP SKEW SENSOR OUTBOARD 5
601C3121-025	Embraer	HARNESS
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
20-171501	Embraer	BRAKE PEDAL POSITION TRANSDUCER
20-171501	Embraer	BRAKE PEDAL POSITION TRANSDUCER
20-171501	Embraer	BRAKE PEDAL POSITION TRANSDUCER
20-171501	Embraer	BRAKE PEDAL POSITION TRANSDUCER
1705683	Embraer	MOUNTING BRACKET WINGTIP
170-19974-001	Embraer	CHART HOLDER
170-00681-420	Embraer	STRUCTURE ASSY
800-009443-1	Embraer	LIGHTPLATE
414950-1003	Embraer	GROUND SPOLLER
414950-1003	Embraer	GROUND SPOLLER
2345H000-003	Embraer	FILTER MANIFOLD, SYSTEM 3
2U2203-4	Embraer	ACTUATOR ASSY, FEEDBACK TRANS
2U2203-4	Embraer	ACTUATOR ASSY, FEEDBACK TRANS
4222-60	Embraer	BALLAST
4222-60	Embraer	BALLAST

4222-60	Embraer	BALLAST
601C0201-035	Embraer	CASCADE, (POST SB 78-0002)
601C0201-041	Embraer	CASCADE, (POST SB 78-0002)
601C0201-041	Embraer	CASCADE, (POST SB 78-0002)
601C0201-031	Embraer	CASCADE, (POST SB 78-0002)
601C0201-031	Embraer	CASCADE, (POST SB 78-0002)
601C0201-043	Embraer	CASCADE, (POST SB 78-0002)
2U2219-3	Embraer	BRACKET
2U2219-3	Embraer	BRACKET
2U2219-5	Embraer	BRACKET
2U2206-2	Embraer	TUBE SYNC
341W5812-501	Embraer	WIRE HARNESS ASSEMBLY
S67-1575-132	Embraer	GPS ANTENNA
S67-1575-132	Embraer	GPS ANTENNA
7024440-1903	Embraer	POWER 902 MODULE
7024440-1903	Embraer	POWER 902 MODULE
7024440-1903	Embraer	POWER 902 MODULE
7024440-1903	Embraer	POWER 902 MODULE
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103	Embraer	LIFEJACKET
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P01074-101W	Embraer	LIFEVEST
P0724-105	Embraer	LIFEVEST
D21393-101	Embraer	LIFE VEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723-103	Embraer	LIFEJACKET
P0723-103	Embraer	LIFEJACKET
P0723-103W	Embraer	LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST

P0723-103	Embraer	LIFEJACKET
P010575-101	Embraer	LIFE VEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P01074-101W	Embraer	LIFEVEST
D21343-101	Embraer	LIFEJACKET
P01074-101W	Embraer	LIFEVEST
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103	Embraer	LIFEJACKET
P0723-103	Embraer	LIFEJACKET
P0723-103	Embraer	LIFEJACKET
3500-111-26	Embraer	LIFE JACKET
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
170-41851-417	Embraer	MAIN LINING ASSY
170-41853-415	Embraer	MAIN LINING ASSY AFT
170-41856-013	Embraer	MAIN LINING DETAIL
170-41854-423	Embraer	MAIN LINING ASSY
170-41881-409	Embraer	HINGE COVER ASSY AFT
170-41878-409	Embraer	HINGE COVER ASSY FWD
171-41581-403	Embraer	PANEL ASSY - FWD SVC
171-41683-401	Embraer	LINING ASSY AFT SVC
170-41896-001	Embraer	HINGE COVER DETAILAFT PAX
170-42103-009	Embraer	LOWER LINING DETAIL
S41422	Embraer	Dual GS Antenna
170-42097-411	Embraer	LOWER LINING ASSY AFT
6375A0001-01	Embraer	ACTUATOR,ELETROMECHANICAL
6375A0001-01	Embraer	ACTUATOR,ELETROMECHANICAL
9070B0019-01	Embraer	STEERING PEDAL SENSOR
190-38801-405	Embraer	AILERON ASSY,LH
502748-401-2253	Embraer	SEAT BELT
190-38801-406	Embraer	AILERON ASSY,RH
190-62062-411	Embraer	ELEVATOR COMPLETION
190-62062-412	Embraer	ELEVATOR COMPLETION
9631680-0004	Embraer	TANK, POTABLE WATER
170-69600-439	Embraer	DOOR EQUIPPED
170-84520-433	Embraer	DOOR EQUIPPED
2314M-513-5	Embraer	RH WINDSHIELD WIPER ARM
2314M-512-5	Embraer	LH WINDSHIELD WIPER ARM
190-92101-422	Embraer	CARRIAGE ASSY MAIN3,4_OUTBD FLAP

474349-1	Embraer	DRIER METERING
2352H000-002	Embraer	FILTER, CASE DRAIN
5913479	Embraer	SLAT SKEW SENSOR OUTBD
5913479	Embraer	SLAT SKEW SENSOR OUTBD
5913479	Embraer	SLAT SKEW SENSOR OUTBD
5913479	Embraer	SLAT SKEW SENSOR OUTBD
190-92001-421	Embraer	CARRIAGE ASSY MAIN 1 INBD FLAP
41131001-237	Embraer	FLIGHT ATTENDANT SEAT
41131001-237	Embraer	FLIGHT ATTENDANT SEAT
41131001-235	Embraer	FLIGHT ATTENDANT SEAT
170-03460-407	Embraer	TORQUE TUBE ELEVATOR
170-03515-409	Embraer	TORQUE TUBE AILERON
170-03516-409	Embraer	TORQUE TUBE AILERON
30-2848-3	Embraer	LIGHT ASSY-POSITION,WINGTIP LH
30-2848-6	Embraer	LIGHT ASSY-POSITION,WINGTIP RH
LAMEMK00012	Embraer	MEDICAL KIT
C158823-1	Embraer	FLAP ACTUATOR
190-38001-407	Embraer	FLAP ASSY
3E2Y8111	Embraer	AC IN SEAT POWER SUPPLY
341-3501-503	Embraer	EXHAUST NOZZLE ASSY
341-3101-503	Embraer	CENTREBODY FWD
341-3121-503	Embraer	CENTREBODY AFT
7024440-1903	Embraer	POWER 902 MODULE
7029782-1914	Embraer	MODULAR AVIONICS UNIT
1001050-6-016	Embraer	AMS PROCESSOR CARD SOFTWARE BL 9
1001050-6-016	Embraer	AMS PROCESSOR CARD SOFTWARE BL 9
1001060-2	Embraer	AMS I/O CARD
1001060-2	Embraer	AMS I/O CARD
1001070-2	Embraer	AMS CARD
1001070-2	Embraer	AMS CARD
1702118	Embraer	FILLER MODULE, SPDA
1702118	Embraer	FILLER MODULE, SPDA
1708007	Embraer	ASCB COMMS MODULE
1708009	Embraer	AC POWER MODULE
1708009	Embraer	AC POWER MODULE
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708013	Embraer	ARINC 429 MODULE
1708015	Embraer	Discrete I/O Module, Spda
1708015	Embraer	Discrete I/O Module, Spda
5913016-5	Embraer	POWER SUPPLY MODULE
5913016-5	Embraer	POWER SUPPLY MODULE
1707944	Embraer	CHASSIS, SEC PWR DISTR ASSEMBLY
170-69000-451	Embraer	DOOR PAX/SERV

170-69300-453	Embraer	DOOR, PAX/SERV
190-31381-406	Embraer	FAIRING, WING ROOT
190-31381-406	Embraer	FAIRING, WING ROOT
170-68500-451	Embraer	DOOR PAX/SERV
170-68000-455	Embraer	DOOR
453-6500	Embraer	NAV INTERFACE
980-6025-001	Embraer	DVDR
980-6025-001	Embraer	DVDR
0009-0148-2	Embraer	HORIZONTAL STABILIZER ACTUATOR
P2-07-0011-500	Embraer	TORCH
P2-07-0011-500	Embraer	TORCH
P2-07-0011-500	Embraer	TORCH
63600-501	Embraer	AC-2000 LIFE PRESERVER
63600-501	Embraer	AC-2000 LIFE PRESERVER
63600-501	Embraer	AC-2000 LIFE PRESERVER
63600-501	Embraer	AC-2000 LIFE PRESERVER
D21344-101	Embraer	LIFEJACKET
289-1002	Embraer	MASK ASSY DEMO
D21343-101	Embraer	LIFEJACKET
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723-103	Embraer	LIFEJACKET
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
D21343-101	Embraer	LIFEJACKET
P0723E105PW	Embraer	LIFEVEST ADULT
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723-103	Embraer	LIFEJACKET
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
D21343-101	Embraer	LIFEJACKET

63600-105	Embraer	AC-2000 LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
63600-105	Embraer	AC-2000 LIFE PRESERVER
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
P0723E105P	Embraer	LIFEVEST
D21343-101	Embraer	LIFEJACKET
P0723-103W	Embraer	LIFE PRESERVER
P0723E105P	Embraer	LIFEVEST
P0723-103W	Embraer	LIFE PRESERVER
P0723-103W	Embraer	LIFE PRESERVER
9631710-0001	Embraer	WATER IND
2950004-304	Embraer	SOV ACTUATOR ASSY, 28 VDC
19000-320	Embraer	SWITCH
158506-06F	Embraer	QUICK DISCONNECT
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
3601-155-565/193	Embraer	SENSOR
3601-155-565/193	Embraer	SENSOR
810211-2	Embraer	EBAY TEMPERATURE SENSOR
810234-3	Embraer	TEMP SENSOR
905614-1	Embraer	ATTENUATOR, PRESSURE LINE, ACMP
474349-1	Embraer	DRIER METERING
170-08801-403	Embraer	CHECK VALVE
170-08801-403	Embraer	CHECK VALVE
170-71000-407	Embraer	UP LOCK BOX EQUIPPED
2950004-304	Embraer	SOV ACTUATOR ASSY, 28 VDC
2950004-304	Embraer	SOV ACTUATOR ASSY, 28 VDC
38-909500-2	Embraer	Fuse Hydraulic
2940030-301	Embraer	GRAVITY FILL CAP
1001448-2	Embraer	APU BLEED CHECK VALVE
17000595	Embraer	BEARING SUPPORT
158510-10E	Embraer	QUICK DISCONNECT
2940030-301	Embraer	GRAVITY FILL CAP
2990051-102	Embraer	VALVE, SHUTOFF
2990051-102	Embraer	VALVE, SHUTOFF
2990051-102	Embraer	VALVE, SHUTOFF
504580-407-2396	Embraer	SEAT BELT
F7-337-1	Embraer	PRESSURE SWITCH
17000641	Embraer	BEARING SUPPORT

975287-7	Embraer	FIREWALL SHUTOFF VALVE
9631220-0001	Embraer	MANIFOLD, AIR
504580-407-2396	Embraer	SEAT BELT
190-92101-422	Embraer	CARRIAGE ASSY MAIN3,4_OUTBD FLAP
190-92101-421	Embraer	CARRIAGE ASSY MAIN3,4_OUTBD FLAP
975287-7	Embraer	FIREWALL SHUTOFF VALVE
158506-06F-E17	Embraer	STRATOFLEX
601C0031-533	Embraer	ISOLATION CONTROL VALVE
601C0031-533	Embraer	ISOLATION CONTROL VALVE
9631110-0001	Embraer	VALVE,DRAIN MOTOR OPERATED
158510-EMB-002	Embraer	QUICK DISCONNECT, MOTIVE FLOW
190-83000-413	Embraer	DOOR
190-83000-413	Embraer	DOOR
980-6124-002	Embraer	DVDR CONTROL PANEL
C158822-1	Embraer	FLAP ACTUATOR
C158823-1	Embraer	FLAP ACTUATOR
C158818-1	Embraer	FLAP ACTUATOR
C158821-1	Embraer	FLAP ACTUATOR
C158820-1	Embraer	FLAP ACTUATOR
C158820-1	Embraer	FLAP ACTUATOR
C158819-1	Embraer	FLAP ACTUATOR
3R1209B	Embraer	RUDDER PEDAL LOAD CELL
3R1209B	Embraer	RUDDER PEDAL LOAD CELL
3R1209B	Embraer	RUDDER PEDAL LOAD CELL
3R1209B	Embraer	RUDDER PEDAL LOAD CELL
3R1223A	Embraer	ELEVATOR CONTROL COLUMN LOAD CELL
3R1223A	Embraer	ELEVATOR CONTROL COLUMN LOAD CELL
190-70161-001	Embraer	BRACKET LOCK STAY
190-92051-422	Embraer	CARRIAGE ASSY MAIN2_INBD FLAP
904805-02	Embraer	GEARBOX FIRE DETECTOR, CRES
904811-02	Embraer	Lower Core Fire Detector, Cres
904809-02	Embraer	UPPER CORE FIRE DETECTOR, CRES
904807-02	Embraer	Oil Tank Detector
170-03448-407	Embraer	PEDALS ASSY
170-03448-407	Embraer	PEDALS ASSY
171-01041-407	Embraer	STICK STRUCTURE ASSY
170-71306-407	Embraer	MECHANISM, CMD ASSY
190-92101-421	Embraer	CARRIAGE ASSY MAIN3,4_OUTBD FLAP
171-00939-407	Embraer	STICK STRUCTURE ASSY,LEFT
170-08756-407	Embraer	ELEVATOR TORQUE TUBE
191-17273-401	Embraer	HARNESS W513, SLAT 4 LH
S65-247-33	Embraer	Antenna Dual Vor
H158006-SJ001	Embraer	HOSE ASSEMBLY, REVERSER, HYDRAULIC
H158008-SJ001	Embraer	HOSE ASSEMBLY, REVERSER, HYDRAULIC
H158008-SJ001	Embraer	HOSE ASSEMBLY, REVERSER, HYDRAULIC
H158008-SJ001	Embraer	HOSE ASSEMBLY, REVERSER, HYDRAULIC
AS-200-00003	Embraer	ATTENDANT
7027566-902	Embraer	BUS COUPLER

071-00097-0100	Embraer	PANEL ASSY
S65-5366-7L	Embraer	Antenna
071-00097-0100	Embraer	PANEL ASSY
190-38301-403	Embraer	FLAP ASSY
341-2001-513	Embraer	COWL ASSY
341-2001-513	Embraer	COWL ASSY
190-38001-408	Embraer	FLAP ASSY
190-92001-422	Embraer	CARRIAGE ASSY MAIN 1 INBD FLAP
190-38301-404	Embraer	FLAP ASSY
245-604067-001	Embraer	GPS MODULE
7034055-1901	Embraer	CMC MODULE
7028422-1902	Embraer	Customer I/O Module
142-091142	Embraer	BRAKE CONTROL MODULE
7028272-1801	Embraer	ELECTRONIC MODULE
7028272-1801	Embraer	ELECTRONIC MODULE
80-003-06	Embraer	ELECT MOD. PROX
7024440-1903	Embraer	POWER 902 MODULE
7024440-1903	Embraer	POWER 902 MODULE
2990076-102	Embraer	VALVE,DRAIN-FUEL SYS
38-919500	Embraer	CHECK VALVE (IN-6/OUT-8)
38-919500	Embraer	CHECK VALVE (IN-6/OUT-8)
1001541-1	Embraer	TEMPERATURE SENSOR, SLAT SKIN
1001541-1	Embraer	TEMPERATURE SENSOR, SLAT SKIN
1001541-1	Embraer	TEMPERATURE SENSOR, SLAT SKIN
1002391-1	Embraer	GAGE PRESSURE SENSOR
1002391-1	Embraer	GAGE PRESSURE SENSOR
2040016-101	Embraer	PRESSURE RELIEF VALVE
2040016-101	Embraer	PRESSURE RELIEF VALVE
2990076-102	Embraer	VALVE,DRAIN-FUEL SYS
2990076-102	Embraer	VALVE,DRAIN-FUEL SYS
820964-1	Embraer	BLEED PRESSURE SENSOR
38-909500-2	Embraer	Fuse Hydraulic
1702961	Embraer	FLAP/SLAT BEARING SUPPORT
1702961	Embraer	FLAP/SLAT BEARING SUPPORT
1700595	Embraer	SEALED BEARING SUPPORT
1700595	Embraer	SEALED BEARING SUPPORT
975289-3	Embraer	VALVE DUMP, HYDRAULIC
1704208	Embraer	SLAT ANGLE
2344H000-001	Embraer	BYPASS VALVE, HEAT EXCHANGER
2344H000-001	Embraer	BYPASS VALVE, HEAT EXCHANGER
1713255	Embraer	SLAT ACTUATOR TYPE A / E
1703909B	Embraer	SLAT ACTUATOR TYPE D
905614-1	Embraer	ATTENUATOR, PRESSURE LINE, ACMP
905614-1	Embraer	ATTENUATOR, PRESSURE LINE, ACMP
5912868-6	Embraer	TORQUE TUBE S2
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414900-1005	Embraer	GROUND SPOILER ACTUATOR
1713255	Embraer	SLAT ACTUATOR TYPE A / E

1713255	Embraer	SLAT ACTUATOR TYPE A / E
1703909B	Embraer	SLAT ACTUATOR TYPE D
1704208	Embraer	SLAT ANGLE
1703909B	Embraer	SLAT ACTUATOR TYPE D
1703909B	Embraer	SLAT ACTUATOR TYPE D
1703909B	Embraer	SLAT ACTUATOR TYPE D
975289-3	Embraer	VALVE DUMP, HYDRAULIC
1713255	Embraer	SLAT ACTUATOR TYPE A / E
1703909B	Embraer	SLAT ACTUATOR TYPE D
1702961	Embraer	FLAP/SLAT BEARING SUPPORT
2352H000-002	Embraer	FILTER, CASE DRAIN
975303-3	Embraer	PRIORITY VALVE-HYDRAULIC SYSTEM
975303-3	Embraer	PRIORITY VALVE-HYDRAULIC SYSTEM
1713255	Embraer	SLAT ACTUATOR TYPE A / E
1713255	Embraer	SLAT ACTUATOR TYPE A / E
19000-401	Embraer	HEATER BLANKET, CTRL
19000-403	Embraer	HEATER BLANKET, CTRL
170-63042-409	Embraer	DORSAL FIN COMPLETION
414900-1005	Embraer	GROUND SPOILER ACTUATOR
975288-3	Embraer	PRIORITY VALVE
1700639	Embraer	FLAP ANGLE
170-19323-415	Embraer	LH CEILING LINING PANEL EQUIPPED
170-19324-415	Embraer	RH CEILING LINING PANEL EQUIPPED
1001449-1	Embraer	CHECK VALVE BYPASS FAN
1001449-1	Embraer	CHECK VALVE BYPASS FAN
170-71000-407	Embraer	UP LOCK BOX EQUIPPED
170-71000-407	Embraer	UP LOCK BOX EQUIPPED
2950004-304	Embraer	SOV ACTUATOR ASSY, 28 VDC
158520-EMB-002	Embraer	QUICK
19000-070	Embraer	BALL VALVE
4441018-001	Embraer	OXYGEN PRESSURE TRANSDUCER
810234-3	Embraer	TEMP SENSOR
140-265	Embraer	WHEEL SPEED TRANSDUCER
140-265	Embraer	WHEEL SPEED TRANSDUCER
975254-8	Embraer	CHECK VALVE, TRAS & PTU
504580-407-2396	Embraer	SEAT BELT
2352H000-002	Embraer	FILTER, CASE DRAIN
171052	Embraer	PRESSURE GAUGE
92003-2790501-10	Embraer	FLAPPER UPPER CHECK
C44000-12-E17	Embraer	QUICK DISCONNECT
2990051-102	Embraer	VALVE, SHUTOFF
C44000-08-E17	Embraer	QUICK DISCONNECT
170-24096-401	Embraer	MODULE ASSY
170-24099-401	Embraer	MODULE ASSY
171-04650-401	Embraer	RAMP / LAN PANEL, ASSY
171-09682-401	Embraer	MODULE ASSY
30-2722-1	Embraer	Light Assy
30-2722-1	Embraer	Light Assy

30-2848-3	Embraer	LIGHT ASSY-POSITION,WINGTIP LH
30-2906-1	Embraer	LIGHT , STROBOSCOPE , RED
980-6113-005	Embraer	MICROPHONE
AS-33-0008	Embraer	EMERGENCY LIGHT
AS-33-0008	Embraer	EMERGENCY LIGHT
AS-33-0008	Embraer	EMERGENCY LIGHT
AS-33-0008	Embraer	EMERGENCY LIGHT
S41422	Embraer	Dual GS Antenna
1C27-29	Embraer	DC FUEL PUMP, CARTRIDGE
158516-16E	Embraer	QUICK DISCONNECT
158510-10E	Embraer	QUICK DISCONNECT
19000-340	Embraer	Fill / Drain Switch Water Sys
504580-407-2396	Embraer	SEAT BELT
820966-3	Embraer	SOLENOID SHUTOFF VALVE
51166-04	Embraer	Hydraulic AC Module
170-71200-407	Embraer	ACTUATOR, NLG DOWNLOCK RELEASE
2990074-101	Embraer	VALVE, FLOAT ACTUATED TYPE
170-71250-403	Embraer	VALVE - FREE FALL SELECTOR
190-71100-405	Embraer	ACTUATOR, DOWNLOCK RELEASE
51165	Embraer	POWER TRANSFER UNIT, HYDRAULIC
2990073-104	Embraer	WATER DRAIN VALVE
2990073-104	Embraer	WATER DRAIN VALVE
158510-EMB-002	Embraer	QUICK DISCONNECT, MOTIVE FLOW
2990078-102	Embraer	REFUEL SHUTOFF VALVE
19000-200-403	Embraer	SENSOR, INTERMEDIATE LEVEL
92003-2060091-10	Embraer	VALVE
92003-2060091-10	Embraer	VALVE
2950004-304	Embraer	SOV ACTUATOR ASSY, 28 VDC
2990059-102	Embraer	VALVE,SOLENOID ASSY
2990059-102	Embraer	VALVE,SOLENOID ASSY
158520-EMB-002	Embraer	QUICK
1700637	Embraer	FLAP ANGLE
80-019-01	Embraer	PROXIMITY SENSOR
80-019-01	Embraer	PROXIMITY SENSOR
F-337-1	Embraer	PRESSURE SWITCH
F-337-1	Embraer	PRESSURE SWITCH
F7-330-1	Embraer	PRESSURE SWITCH
F7-330-1	Embraer	PRESSURE SWITCH
190-71100-405	Embraer	ACTUATOR, DOWNLOCK RELEASE
1713255	Embraer	SLAT ACTUATOR TYPE A / E
415100-1003	Embraer	AILERON PCU
415400-1009	Embraer	RUDDER ACTUATOR
1703785A	Embraer	ACTUATOR, AIR DRIVEN GENERATOR
424700-1003	Embraer	ELEVATOR ARTIFICIAL FEEL UNIT
424700-1003	Embraer	ELEVATOR ARTIFICIAL FEEL UNIT
1704208	Embraer	SLAT ANGLE
2990055-101	Embraer	SCAVENGE EJECTOR PUMP
170-24297-405	Embraer	DISCONNECT DEVICE ASSY

1700637	Embraer	FLAP ANGLE
56D622	Embraer	AXE
354841	Embraer	GLOVES
19000-402	Embraer	HEATER BLANKET, CTRL
3R1208B	Embraer	AILERON CONTROL WHEEL LOAD CELL
3R1208B	Embraer	AILERON CONTROL WHEEL LOAD CELL
3R1208B	Embraer	AILERON CONTROL WHEEL LOAD CELL
2990055-101	Embraer	SCAVENGE EJECTOR PUMP
170-45447-401	Embraer	SPEAKER ASSY
1703909B	Embraer	SLAT ACTUATOR TYPE D
383300-1009	Embraer	ELECTROMECHANICAL ACTUATOR
39-891-3	Embraer	Brake Control Valve With Filters An
38-909500-2	Embraer	Fuse Hydraulic
1001451-2	Embraer	COUPLING
38-957500-2	Embraer	Brake Shutoff Valve
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
3R1208B	Embraer	AILERON CONTROL WHEEL LOAD CELL
2990078-102	Embraer	REFUEL SHUTOFF VALVE
905613-1	Embraer	ATTENUATOR, SUCTION LINE, EDP
1001541-1	Embraer	TEMPERATURE SENSOR, SLAT SKIN
1001541-1	Embraer	TEMPERATURE SENSOR, SLAT SKIN
1001541-1	Embraer	TEMPERATURE SENSOR, SLAT SKIN
820964-1	Embraer	BLEED PRESSURE SENSOR
1012191-1	Embraer	HPSOV PRESSURE SWITCH
1012191-1	Embraer	HPSOV PRESSURE SWITCH
1702961	Embraer	FLAP/SLAT BEARING SUPPORT
38-919501	Embraer	CHECK VALVE
1704208	Embraer	SLAT ANGLE
38-957500-2	Embraer	Brake Shutoff Valve
1713255	Embraer	SLAT ACTUATOR TYPE A / E
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
2990076-102	Embraer	VALVE,DRAIN-FUEL SYS
2990055-101	Embraer	SCAVENGE EJECTOR PUMP
2990055-101	Embraer	SCAVENGE EJECTOR PUMP
2990055-101	Embraer	SCAVENGE EJECTOR PUMP
2990055-101	Embraer	SCAVENGE EJECTOR PUMP
2990054-101	Embraer	MAIN EJECTOR PUMP
2990054-101	Embraer	MAIN EJECTOR PUMP
38-909500-2	Embraer	Fuse Hydraulic
9C148-4	Embraer	CARTRIDGE PUMP
9C148-4	Embraer	CARTRIDGE PUMP
9C149-3	Embraer	Cartridge Ac Auxiliar Boost Pump
9C149-3	Embraer	Cartridge Ac Auxiliar Boost Pump

415100-1003	Embraer	AILERON PCU
975302-1	Embraer	PUMP UNLOADER VALVE
1700639	Embraer	FLAP ANGLE
39-891-2	Embraer	Brake Control Valve With Filters An
39-891-2	Embraer	Brake Control Valve With Filters An
975254-1	Embraer	CHECK VALVE, CD
975301-5	Embraer	FLOW LIMITER VALVE
2343H000-001	Embraer	SWITCH,PRESSURE
2990074-101	Embraer	VALVE, FLOAT ACTUATED TYPE
975289-3	Embraer	VALVE DUMP, HYDRAULIC
35-833500	Embraer	CHARGE VALVE
38-909500-2	Embraer	Fuse Hydraulic
39-891-3	Embraer	Brake Control Valve With Filters An
975303-3	Embraer	PRIORITY VALVE-HYDRAULIC SYSTEM
975254-4	Embraer	CHECK VALVE, RTN
5912949-8	Embraer	TORQUE TUBE F2, 190
414900-1005	Embraer	GROUND SPOILER ACTUATOR
414500-1001	Embraer	SINGLE LVDT POSITION SENS
975285-3	Embraer	PTU SELECTOR VALVE
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
1702961	Embraer	FLAP/SLAT BEARING SUPPORT
820966-3	Embraer	SOLENOID SHUTOFF VALVE
1700641	Embraer	FLAP BEARING
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
142-091142	Embraer	BRAKE CONTROL MODULE
1855A0000-04	Embraer	Steering Module
7029782-1923	Embraer	MODULAR AVIONICS UNIT-16SLOTS
2990050-101	Embraer	FLAME ARRESTER
2R5310A	Embraer	AUTOPILOT SERVO
2R5310A	Embraer	AUTOPILOT SERVO
424800-1001	Embraer	RUDDER ARTIFICIAL FEEL UNIT
2990050-101	Embraer	FLAME ARRESTER
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
414500-1001	Embraer	SINGLE LVDT POSITION SENS
383300-1009	Embraer	ELECTROMECHANICAL ACTUATOR
170-24298-407	Embraer	DISCONNECT DIVICE ASSY

425900-1001	Embraer	SENSOR, DUAL POSITION LVDT
425900-1001	Embraer	SENSOR, DUAL POSITION LVDT
425900-1001	Embraer	SENSOR, DUAL POSITION LVDT
425900-1001	Embraer	SENSOR, DUAL POSITION LVDT
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45446-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
170-45447-401	Embraer	SPEAKER ASSY
7029782-1923	Embraer	MODULAR AVIONICS UNIT-16SLOTS
21425-01	Embraer	VALVE OUTFLOW VALVE
5914482-1	Embraer	CHASSIS, PRIM PWR DISTR ASSEMBLY
FE374400000	Embraer	Pneumatic Assembly
FE374400000	Embraer	Pneumatic Assembly
5912843-7	Embraer	FLAP SKEW SENSOR OUTBOARD 5
5912843-7	Embraer	FLAP SKEW SENSOR OUTBOARD 5
366-927-001	Embraer	FUEL REPEATER INDICATOR
366-208-001	Embraer	REFUELING
2940039-104	Embraer	REFUELING ADAPTOR
FE374500000	Embraer	Pneumatic Assembly
FE374500000	Embraer	Pneumatic Assembly
241-292-004-023	Embraer	INTEGRATED ENGINE VIBRATION MONITOR
4119-0017-1	Embraer	MOTOR ELECTRIC
5930-4-000	Embraer	IMPACT SWITCH
0050N1	Embraer	STICK SHAKER ACTUATOR
0050N1	Embraer	STICK SHAKER ACTUATOR
110-337-01	Embraer	Antenna, Elt Antenna
4119-0017-1	Embraer	MOTOR ELECTRIC
080-261-004	Embraer	HARNESS, WING TANK FUEL GAUGING
080-261-004	Embraer	HARNESS, WING TANK FUEL GAUGING
8851C000-001	Embraer	HEAT EXCHANGER, HYDRAULIC FLUID TO
8851C000-001	Embraer	HEAT EXCHANGER, HYDRAULIC FLUID TO
170-72900-405	Embraer	STEERING MANIFOLD
2R5310A	Embraer	AUTOPILOT SERVO
5913447	Embraer	RESTOW PUMP, AIR DRIVEN GENERATOR
51166-04	Embraer	Hydraulic AC Module

424600-1005	Embraer	AILERON ARTIFICIAL FEEL UNIT
2346H000-006	Embraer	FILTER MANIFOLD SYSTEMS 1 & 2
2346H000-006	Embraer	FILTER MANIFOLD SYSTEMS 1 & 2
1-7054-3	Embraer	SWITCH
170-00624-409	Embraer	FIRE EXTINGUISHER PANEL
170-00628-409	Embraer	MODULE ASSY
453-5000	Embraer	TRANSMITTER/LOCATOR
170-00676-407	Embraer	MODULE ASSY
24373REVB	Embraer	AUTOBRAKE SWITCH
4101722	Embraer	FAN, RECIRCULATION
170-16474-403	Embraer	MODULE ASSY
70-0466-1	Embraer	DIMMER-4 CHANNELS,ELECTRICAL SYS
367-336-002	Embraer	Unit Conditioning Fuel
170-00623-411	Embraer	CONTROL PANEL COCKPIT LIGHTS
S35-1000-2	Embraer	Marker Beacon Antenna
S65-5366-7L	Embraer	Antenna
S65-5366-7L	Embraer	Antenna
S65-5366-7L	Embraer	Antenna
S65-5366-7L	Embraer	Antenna
19000-131	Embraer	RELAY, ASSY, MOTOR STARTING
16-21B MOD.2	Embraer	VHF COM Antena
170-00675-407	Embraer	MODULE ASSY
2015G2H2H-9	Embraer	SMART PROBE DUEL COMM
4421003-001	Embraer	Cabin Altimetric Switch
170-13689-403	Embraer	MODULE ASSY
170-13689-403	Embraer	MODULE ASSY
170-00625-413	Embraer	MODULE ASSY
170-00626-407	Embraer	MODULE ASSY
1707930	Embraer	CHASSIS, SEC PWR DISTR ASSEMBLY
1701321D	Embraer	Generator Control Unit
1701337D	Embraer	External Power Module
5913148-3	Embraer	TRU
21609-04BA	Embraer	CONTROLLER, CPCS
7031051-903	Embraer	DATA MANAGEMENT UNIT
1001900-2	Embraer	REFRIGERATION PACK, ERJ-190
1001900-2	Embraer	REFRIGERATION PACK, ERJ-190
41102001-101	Embraer	SEAT ASSY, OBSERVER COCKPIT
7517959-902	Embraer	RADIO RACK
7517959-902	Embraer	RADIO RACK
7517400-950	Embraer	TRANSPONDER
7510184-855	Embraer	MODULE DME
7510184-855	Embraer	MODULE DME
7510184-855	Embraer	MODULE DME
7510114-855	Embraer	MODULE ADF
7517400-950	Embraer	TRANSPONDER
60-5127-1	Embraer	POWER SUPPLY - LIGHT , STROBOSCOPE
473597-18	Embraer	SMOKE DETECTOR
473597-18	Embraer	SMOKE DETECTOR

473597-18	Embraer	SMOKE DETECTOR
473597-18	Embraer	SMOKE DETECTOR
1708015	Embraer	Discrete I/O Module, Spda
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
4222-50	Embraer	BALLAST
1191-8	Embraer	CONVERTER, 115VAC/400HZ TO 110VAC/6
19000-200-401	Embraer	SENSOR, FULL LEVEL - WASTE SYSTEM
SYLZ-53118	Embraer	WINDSHIELD TEMPERATURE CONTROLLER
473597-18	Embraer	SMOKE DETECTOR
S65-5366-7L	Embraer	Antenna
S65-5366-7L	Embraer	Antenna
602-3375	Embraer	MICROPHONE
473597-18	Embraer	SMOKE DETECTOR
473597-18	Embraer	SMOKE DETECTOR
473597-18	Embraer	SMOKE DETECTOR
60-5127-1	Embraer	POWER SUPPLY - LIGHT , STROBOSCOPE
170-16907-403	Embraer	MODULE ASSY
1702961	Embraer	FLAP/SLAT BEARING SUPPORT
900105-1	Embraer	HYDRAULIC ACUMULATOR
900099-3	Embraer	Hydraulic Accumulator
1703909B	Embraer	SLAT ACTUATOR TYPE D
38-909500-2	Embraer	Fuse Hydraulic
1703787	Embraer	UPLOCK, AIR DRIVEN GENERATOR
SYLZ-53118	Embraer	WINDSHIELD TEMPERATURE CONTROLLER
170-00627-401	Embraer	MODULE ASSY
1705683	Embraer	MOUNTING BRACKET WINGTIP
2770088-101	Embraer	FLAPPER
1702118	Embraer	FILLER MODULE, SPDA
1708009	Embraer	AC POWER MODULE
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
5913016-5	Embraer	POWER SUPPLY MODULE
1001447-6	Embraer	LOW STAGE BLEED CHECK VALVE
810213-2	Embraer	SPRAY NOZZLE
810213-2	Embraer	SPRAY NOZZLE
414500-1001	Embraer	SINGLE LVDT POSITION SENS
170-05961-411	Embraer	MODULE ASSY
170-00635-403	Embraer	MODULE ASSY
171-02991-401	Embraer	MODULE ASSY
170-00677-403	Embraer	MODULE ASSY
170-06346-403	Embraer	MODULE ASSY

170-00595-409	Embraer	EXTERNAL LIGHT CONTROL PANEL
1702118	Embraer	FILLER MODULE, SPDA
1708007	Embraer	ASCB COMMS MODULE
1708011	Embraer	DC Power Module
1708011	Embraer	DC Power Module
1708015	Embraer	Discrete I/O Module, Spda
1708015	Embraer	Discrete I/O Module, Spda
1708017	Embraer	ANALOG I/O MODULE
5913016-5	Embraer	POWER SUPPLY MODULE
170-00678-405	Embraer	MODULE ASSY
5913152-2	Embraer	BOX, ELECTRIC INTEGRATED, CONTROL
1001778-3	Embraer	SENSOR FLOW
21665-02	Embraer	VALVE, NEGATIVE RELIEF
1001252-2	Embraer	CHECK VALVE, CONDITIONED AIR
1001252-2	Embraer	CHECK VALVE, CONDITIONED AIR
170-00629-403	Embraer	MODULE ASSY
21671-01	Embraer	CHECK VALVE, EMERGENCY VENT
1001452-4	Embraer	CHECK VALVE, EMERGENCY RAM AIR
1001454-1	Embraer	CHECK VALVE, CARGO COMPARTMENT
170-05034-403	Embraer	MODULE ASSY
170-16474-403	Embraer	MODULE ASSY
170-02748-423	Embraer	MODULE ASSY
170-00618-403	Embraer	FUEL CONTROL PANEL
170-00634-409	Embraer	MODULE ASSY
170-05955-401	Embraer	MODULE ASSY
170-11171-409	Embraer	MODULE ASSY
2015G2H2H-9	Embraer	SMART PROBE DUEL COMM
170-00679-405	Embraer	Trim Module Assy
5914868	Embraer	SLAT FLAP CONTROL
170-00633-417	Embraer	MODULE ASSY
SPC-10(Y)	Embraer	INVERTER,STATIC-250VA
4234-11-0200	Embraer	FLIGHT ATTENDANT PANEL
4235-11-0200	Embraer	FLIGHT ATTENDAND
2-7054-3	Embraer	SWITCH
1716280A	Embraer	SLAT OUTBOARD SKEW SENSOR
1716280A	Embraer	SLAT OUTBOARD SKEW SENSOR
1716282A	Embraer	AUTBORD SLAT SKEW SENSOR
1716282A	Embraer	AUTBORD SLAT SKEW SENSOR
424900-1003	Embraer	SPOILER CONTROL LEVER
APE 5200	Embraer	ELETRONIC CLOCK WITH ARINC OUTPUT A
9037B0001-04	Embraer	LANDING GEAR CONTROL LEVER
7519272-901	Embraer	IM950 ACFT PERSONALITY MODULE
7519272-901	Embraer	IM950 ACFT PERSONALITY MODULE
1001497-1	Embraer	VALVE, SHUT-OFF - CARGO COMPARTMENT
21615-02	Embraer	VALVE, POSITIVE RELIEF
170-16907-403	Embraer	MODULE ASSY
171-09681-401	Embraer	MODULE ASSY ,PC OUTLET LEFT 150VA
5930-4-000	Embraer	IMPACT SWITCH

170-04955-413	Embraer	MODULE ASSY
4101724A	Embraer	FAN
170-00677-403	Embraer	MODULE ASSY
170-13667-413	Embraer	MODULE ASSY
170-11173-405	Embraer	MODULE ASSY
PGA0105WG	Embraer	MAGNETIC COMPASS
1001778-3	Embraer	SENSOR FLOW
1700894A	Embraer	CONTROL UNIT, AIR DRIVEN GEN
1708013	Embraer	ARINC 429 MODULE